

# Typesizing Chart

When counting characters include spacing and punctuation.  
 Character Counts shown are close approximations.  
 If exact spacing is required, tracing out complete message is advised.

## HELVETICA MEDIUM UPPER/LOWER CASE

Standard Type Size

Module Number	1.'s	2.'s	3.'s	4.'s	5.'s	6.'s	7.'s	8.'s	9.'s	9.1
Module Length	4-1/2"	4-1/2"	7"	7"	8-3/4"	8-3/4"	11-3/4"	11-3/4"	16"	18"
Type Size	Number of Characters per single line.									
1 - 1-1/4"		3		5	7	7	10	9	13	14
1"		4	7	7	8	8	12	12	16	18
7/8"		5	8	8	9	9	14	13	18	20
3/4"		6	9	9	11	11	16	15	21	24
5/8"		7	11	11	13	13	19	18	26	29
1/2"	8	8	13	13	16	16	24	23	32	35
7/16"	9	9	15	15	19	19	28	27	37	41
3/8"	11	11	17	17	22	22	31	30	41	46
5/16"	13	13	21	21	27	27	38	37	51	57
1/4"	16	16	26	26	33	33	47	45	63	70
7/32"	19	19	29	29	38					
3/16"	23	23	36	36	45					
1/8"	33									

## HELVETICA MEDIUM (ADA) UPPER CASE

ADA Standard Type Sizes

Module Number	1.'s	2.'s	3.'s	4.'s	5.'s	6.'s	7.'s	8.'s	9.'s	9.1
Module Length	4-1/2"	4-1/2"	7"	7"	8-3/4"	8-3/4"	11-3/4"	11-3/4"	16"	18"
Type Size	Number of Characters per single line.									
1 - 1-1/4"		2		4		5	8	8	11	12
1"		3	5	6	7	7	10	10	14	15
7/8"		3	6	7	8	8	11	11	15	17
3/4"	4	4	7	8	10	10	13	13	18	20
5/8"	5	5	8	9	12	12	16	16	21	23